

Parts Supplied:

Item	Qty	Description	Item	Qty	Description
Α	1	Hood Protector	G	4	Small Washer
В	2	Top Metal Clip	Н	2	Large Washer
С	2	Bottom Metal Clip		4	Abrasive Resistant Tape
D	2	Self Taping Screw	J	1	Alcohol Wipe
E	2	Small Screw			
F	2	Large Screw			

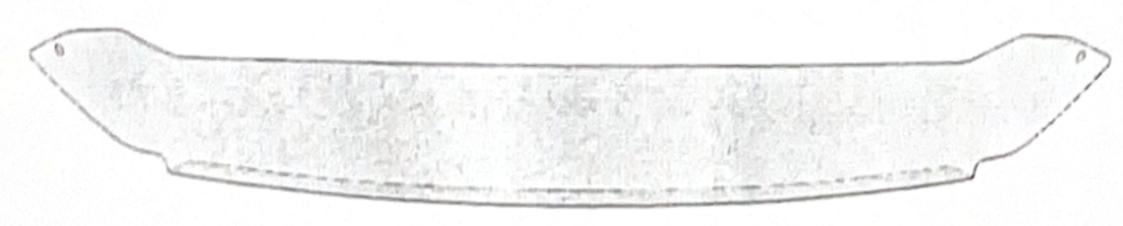

Δ

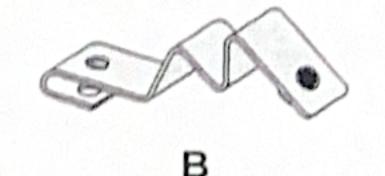
















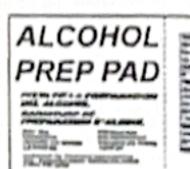


.

Tools Required:






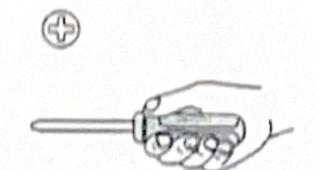






General Care:

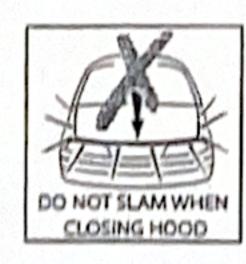


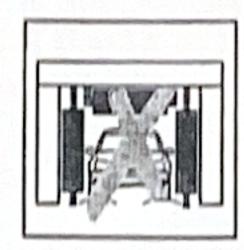









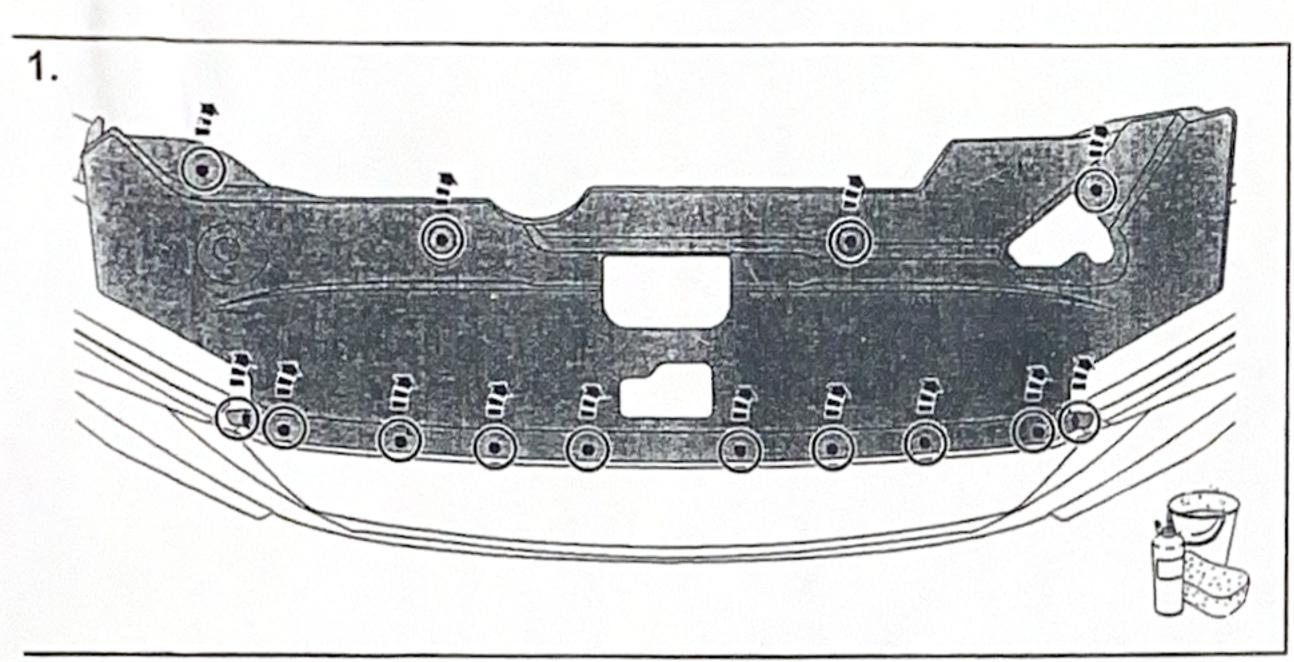


- Open the hood and thoroughly clean and dry the front facia and surrounding areas.
- Remove the upper radiator cover panel by removing the plastic push rivets.
- Retain the push rivets for later reinstallation of the cover and air intake after Hood Protector installation.

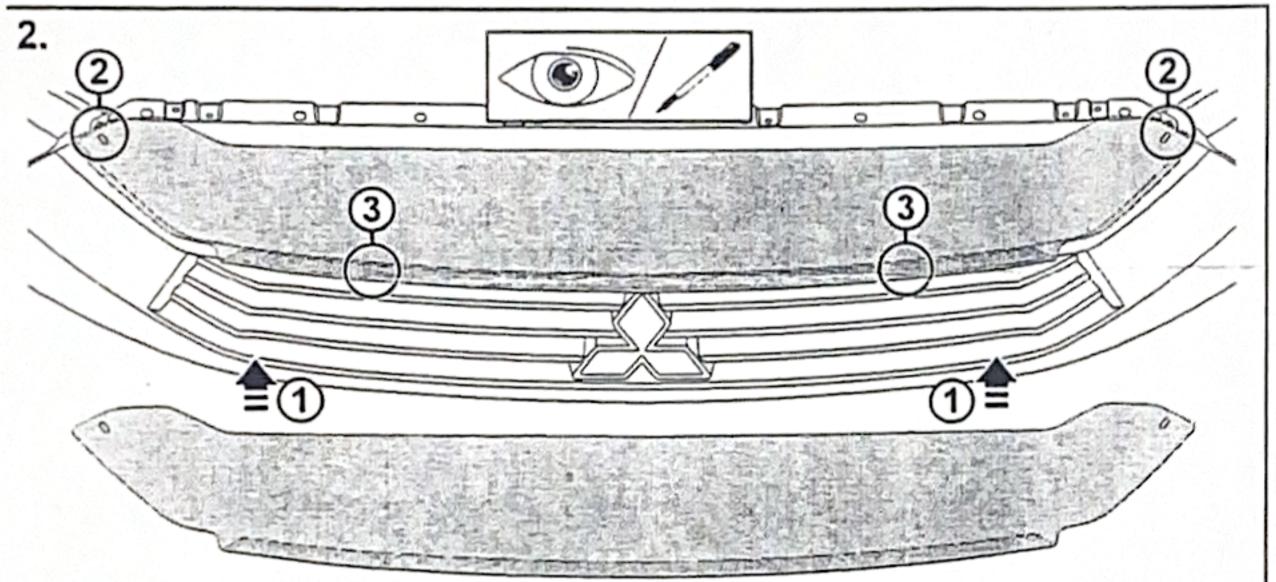


- Trial fit the Hood Protector centrally onto the front facia (1).
- Note the areas of the front facia that correspond to the two slots in the Hood Protector (2).
- Note the area of the front facia that corresponds to the two holes in the acrylic tag of the Hood Protector (3).
- Mark these positions on the front facia with a non-permanent felt pen or pencil.
- · Remove the Hood Protector.

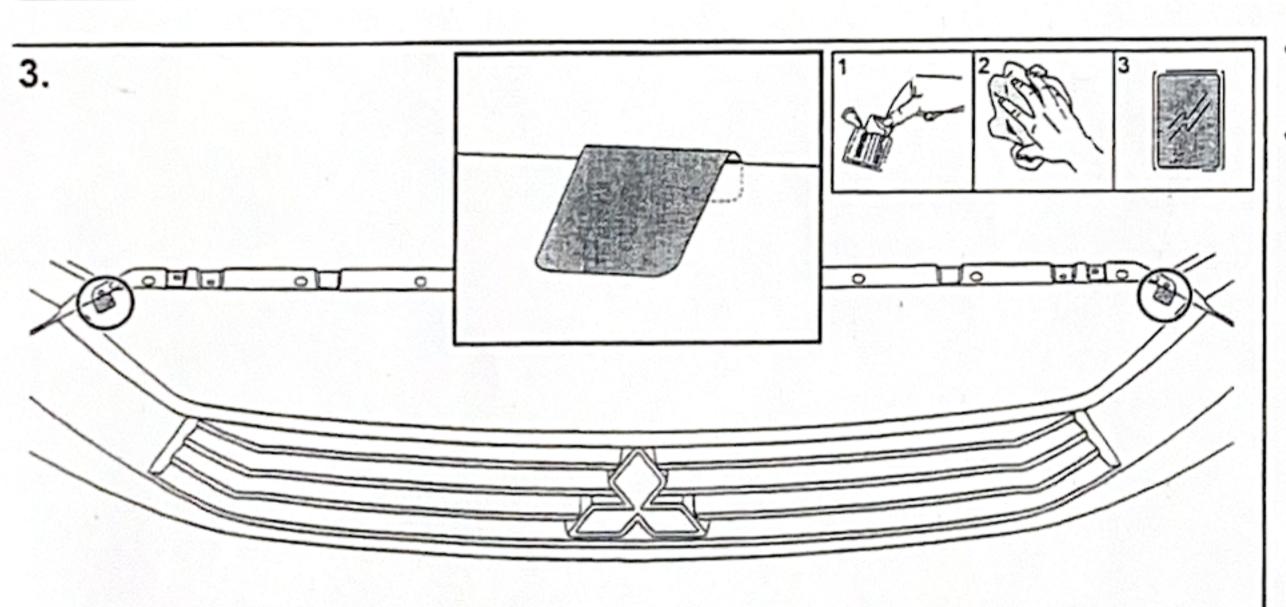


- Clean the previously marked positions with the alcohol wipe provided. Allow to dry.
- At the two locations adhere the two abrasion resistant tapes over the facia lip. Apply the tape so that approximately two thirds of each strip is on the front surface of the facia and one third folds over the inside edge.

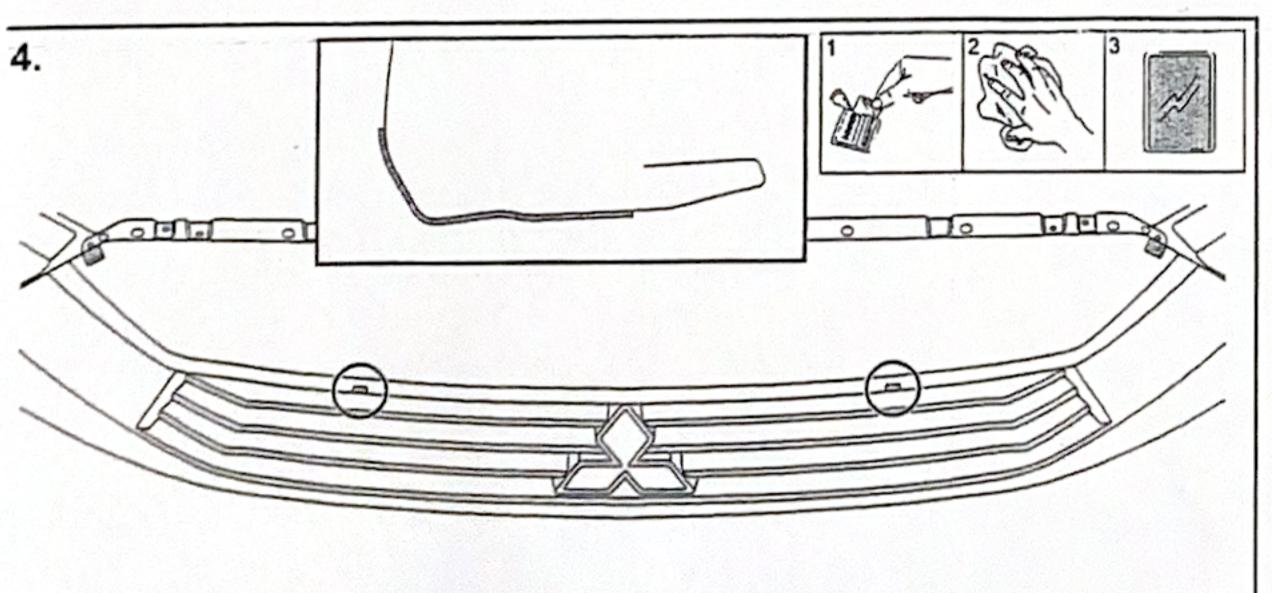


- Clean the previously marked acrylic tag position with the alcohol wipe provided. Allow to dry.
- At the two locations adhere the two abrasion resistant tapes to the underside of the grille lip.
 Apply the tape so that approximately two thirds of each strip is on the underside of the grille and one third on the face.

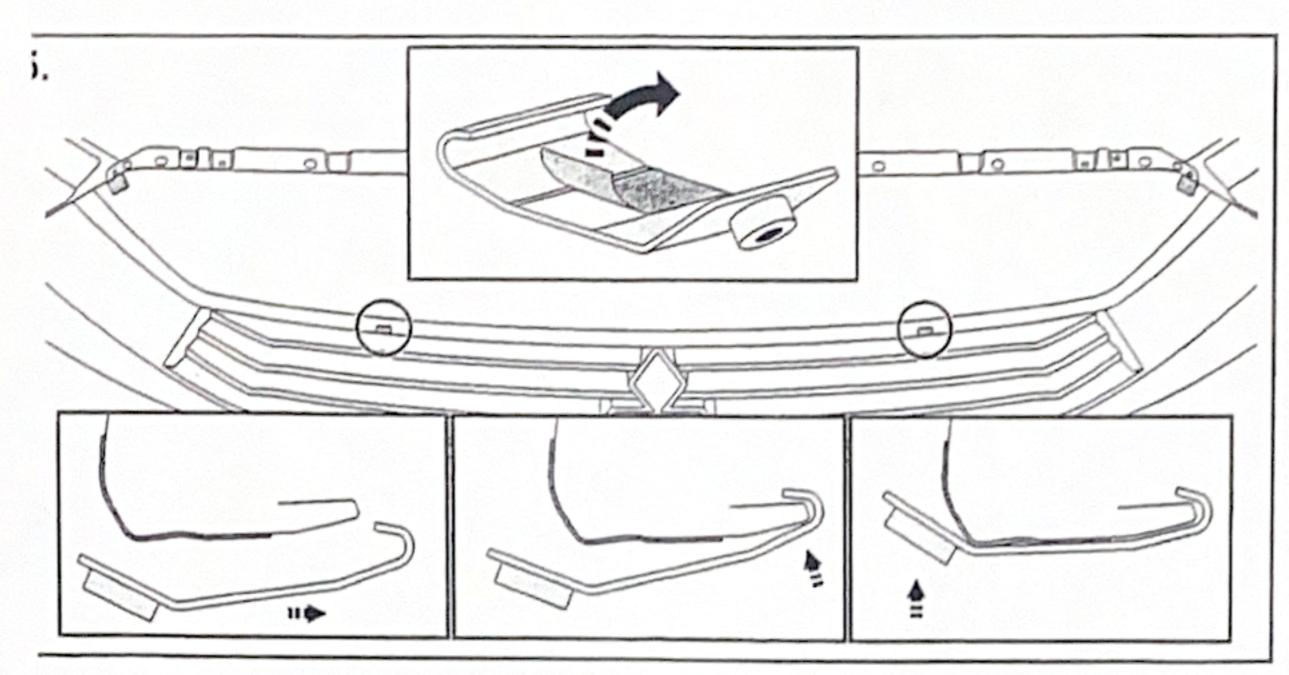


- Peel the backing tape off the bottom metal clips.
- At the previously noted locations, insert the bottom metal clips into the grille. The clip is to be pushed in and up, then pulled forward to catch the upper grille edge.
- IMPORTANT: Ensure the clips rest over the abrasive resistant tape and do not come in contact with chrome. Failure to do this may result in permanent damage.

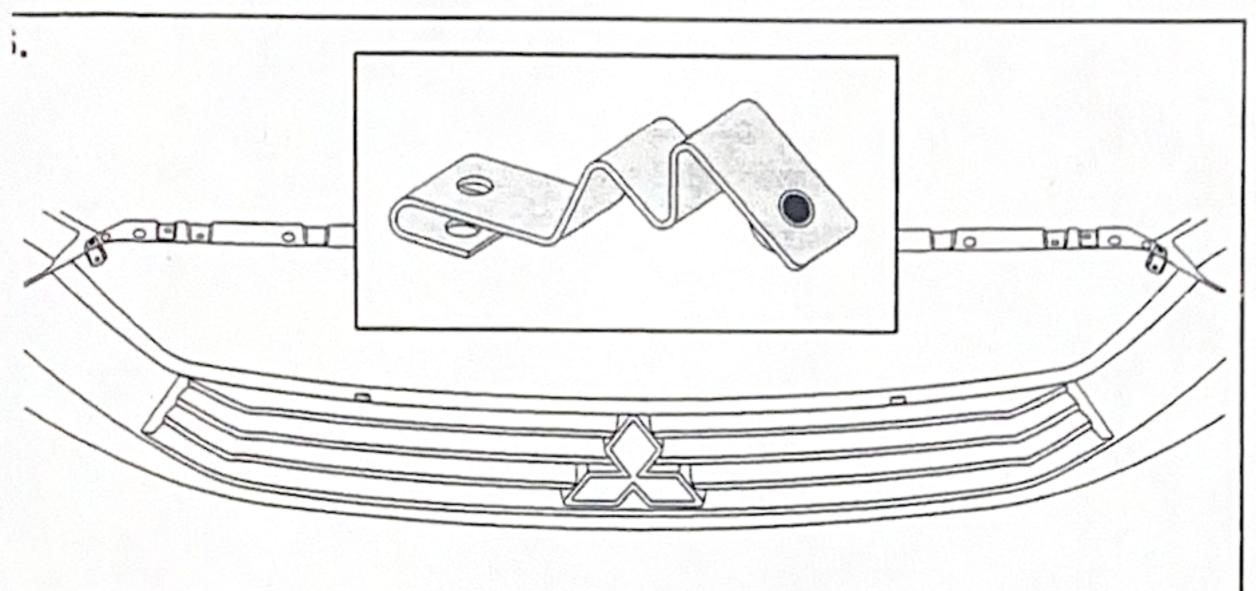


- Position the metal clips over the radiator cover panel, aligning the holes in the metal clips with the holes in the facia.
- IMPORTANT: Ensure the clips rest over the abrasive resistant tape and do not come in contact with the paint work. Failure to do this may result in permanent damage.

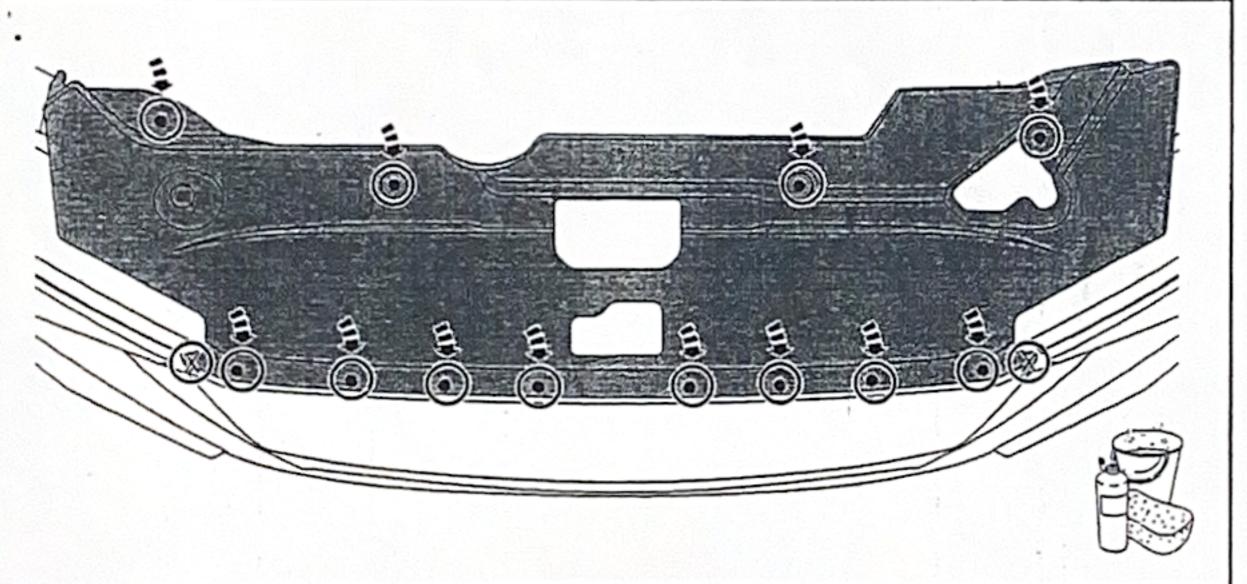


- Re-install radiator cover panel with the plastic push rivets.
- DO NOT INSTALL the outboard pins into the Hood Protector mounting clips.

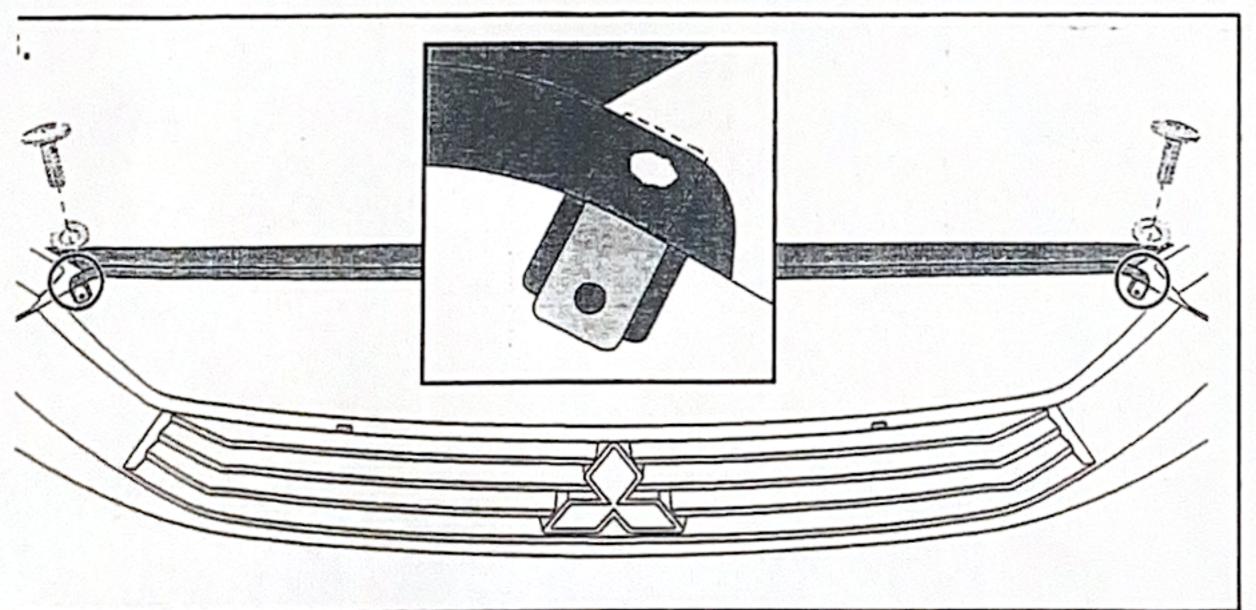

- Secure metal clip to the facia with the self tapping screw and small washer. The screw/washer must be inserted through the hole in rubber strip.
- IMPORTANT: Ensure the clips rest over the abrasive resistant tape and do not come in contact with the paint work. Failure to do this may result in permanent damage.

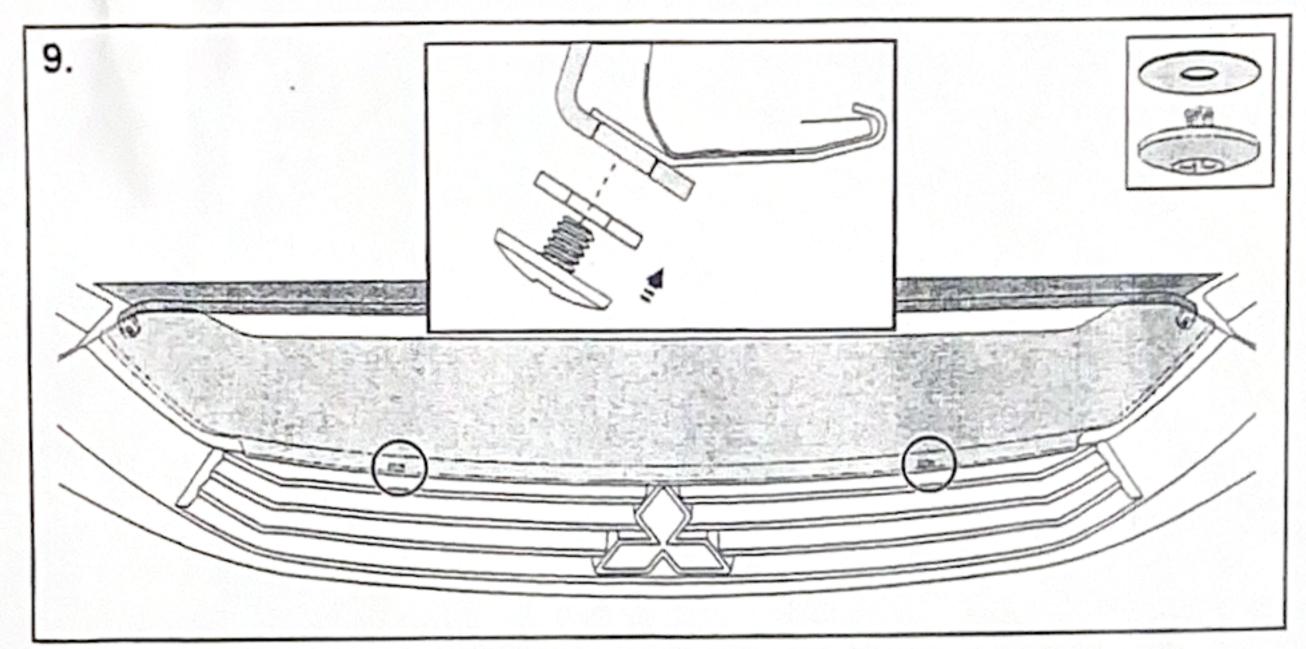

- Re-fit the Hood Protector.
- Fasten to the bottom metal clips with the large screws and large washers provided.
- Check the alignment of the Hood Protector on the vehicle.

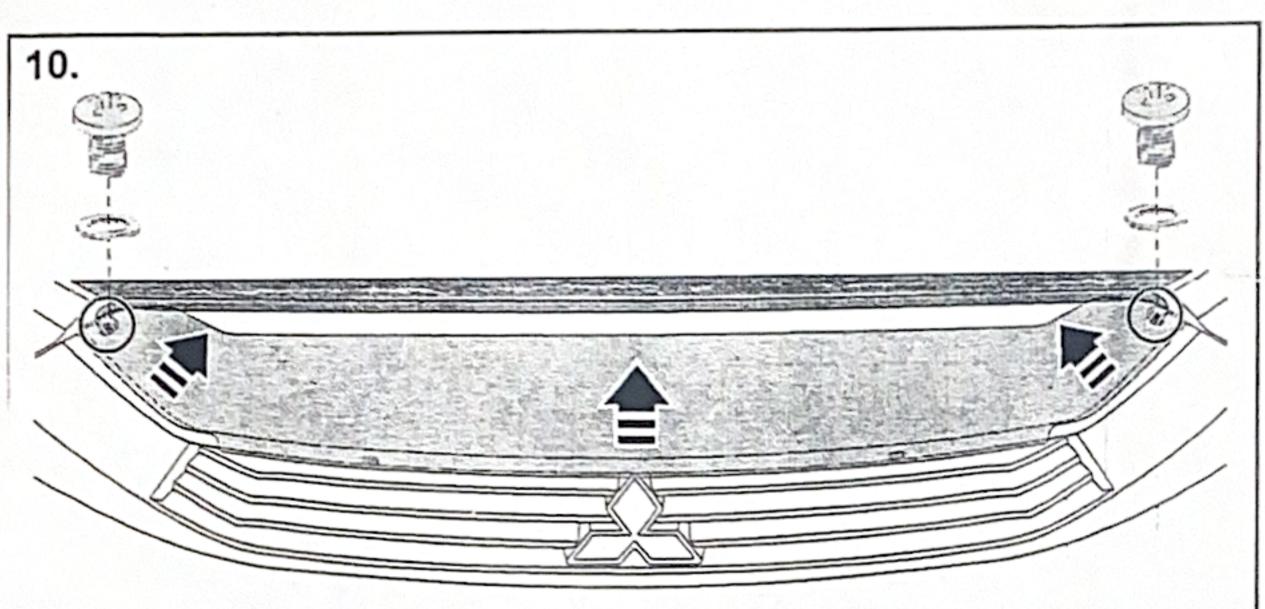

 Fasten the Hood Protector to the top metal clips with the small screws and small washers provided while applying firm upwards pressure to the Hood Protector.

> Page 5 of 5