

INSTALLATION INSTRUCTION

ITEM NO.: W4-np300-NBAR

DESCRIPTION: BRACKET FOR Q1 NUDGE BAR FOR NP300 2015+ (Q235A)

ATTENTION:


- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might happen.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no effect for your fitting.

Part List

NO.	NAME	QTY	REMARK	NO.	NAME	QTY	REMARK
1	Bracket (L)	1		5	PVC Plastic Blocks	2	PVC $\delta 0.7$
2	Bracket (R)	1		6	Spring Washers	8	$\Phi 8$
3	Hexagon Bolts	6	M12*35	7	Hexagon Nuts	6	M12
4	Large Washers	12	$\Phi 12*30*3.0$	8	U-Bolt	1	M12

Notes : the installation is the same on the left and right sides.

INSTALLATION PICTURE

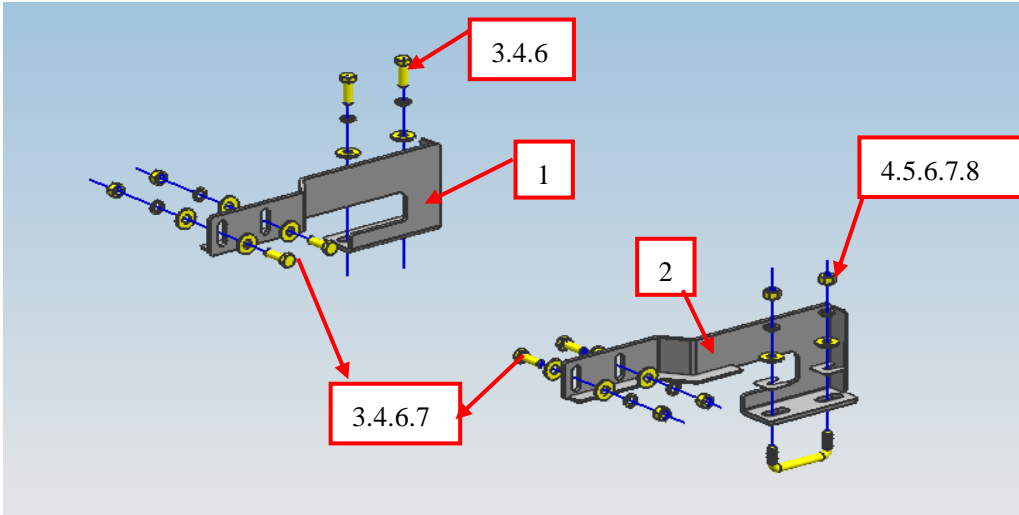

INSTALLATION PROCEDURE

Step 1: Refer to Part List to check if all hard ware are included.

Step 2: Refer to the following pictures to assemble the nudge bar and brackets.



Step 3: Install the nudge bar on the bracket and adjust the mounting position of the bracket according to the position nudge bar.

Step 4: Check if all hard ware are installed and then fasten all to complete the installation.

Disclaimer: Caused due to improper installation initiates or some related problem and losses ,are beyond our company's assurance.