

LDV T60 4WD D/Cab

Grille Guard

WN-LDV-NBAR-SS-B

Installation Instruction

Thank you very much for choosing our products.

Please read the installation instruction carefully before using our product and be sure to fully understand the contents mentioned above for subsequent installation.

In addition, please keep properly the installation instruction for product maintenance in future.

Attentions

- The following symbols are used in this installation instruction.



Caution

**Relevant matters must be obeyed for safety.
Non-compliance may result in injury or other accidents.
Please read carefully and obey strictly.**



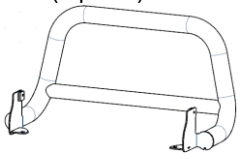








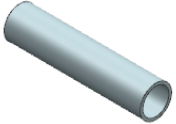
Note

**Relevant matters must be obeyed for the smooth installation
and use.**


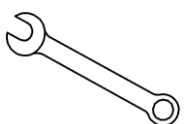
- Non-compliance may cause the problems with vehicle. Please do not install that is not recorded in this instruction.
- Please forgive we are not responsible for any consequences if you install follow your individual subjective thoughts.

Document No.	Issue	Date		Page
	00			1/3

● **Product Composition** *Please confirm if it is missing.

<p>① main body (1 piece)</p> 	<p>② M10 x 30 Bolt (2 piece)</p> 	<p>③ M10 Flat Washer (2 pieces)</p> 	<p>④ M10 lock Washer (2 pieces)</p> 	<p>⑤ M8 x 100 Bolt (teeth 30) (2 pieces)</p> 
<p>⑥ M8 Flat Washer (4 pieces)</p> 	<p>⑦ M8 lock Washer (2 pieces)</p> 	<p>⑧ M8 Nut (2 pieces)</p> 	<p>⑨ Square Washer (40 x 40 x 5 c/w 8.5 hole) (2 pieces)</p> 	<p>⑩ Tube Spacer (12 ERW x 52mm) (2 pieces)</p> 

● **Installation tools** *Please prepare these tools before installation.

<p>plum wrench#13</p> 	<p>plum wrench#17</p> 
---	---

● **Attentions**

- The labels of fitting procedure inside the thick wire frame is particularly important. Pay attention to them in the actual installation.
- Pay attention to safety during installation.

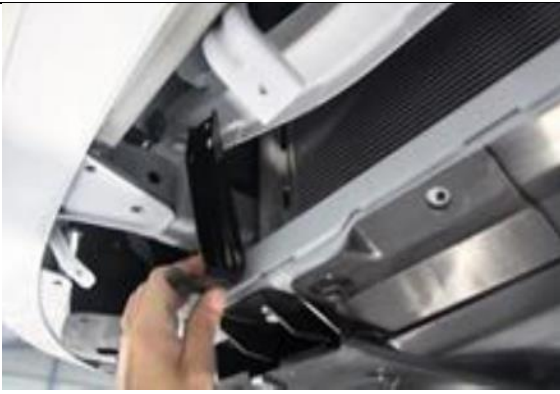
Fitting Procedure



1) Remove centre splash guard (8 x bolts)



2) Remove the outside splash guard bolts, (1 x bolt, 2 x plastic buttons per side) and allow guards to hang down.



- 3) Remove the two bumper support brackets (1 per side, 2 x bolts per bracket). Remove the outside chassis bolts, one bolt per side,



- 4) Fit bar and loosely secure using M10 bolts through bottom mount brackets.



- 5) Slide flat washer, square washer and tube spacer onto M8 x 100 bolt. Fit bolt assembly (from inside of chassis) through existing hole and through alloy mount plate. Fit 8mm flat washer, spring washer and nut. Align bar with vehicle and tighten bolts.
Torque settings: M10 bolt - 44Nm
M8 bolt - 22Nm



- 6) Refit the bumper support brackets, the outside splash guards, & the belly pan. Trim 60mm off each end of the centre splash guard and refit to vehicle (6 x bolts).

Note

Check that the kit contents are complete and undamaged prior to installation. Kit contents must be replaced with specified accessory components.

Do not attach the bar to the vehicle using anchorages not intended for this purpose.

Do not use the bar for any vehicle other than those specified by the bar manufacturer.

The use of an alloy polish such as 'Auto Sol' is recommended for extra shine, however hot soapy water will also clean well.

Document No.	Issue	Date	Page
	00		3/3